

Keysight E6951A PSAP Emulator

Installation Guide

Notices

© Keysight Technologies 2016

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

E6951-90004

Edition

Edition 1, October 2016

Published by:
Keysight Technologies Singapore
(Holdings) Pte. Ltd.
1 Yishun Avenue 7
Singapore 768923
Singapore

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Notice

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Keysight Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no

greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

Installing the E6951A PSAP Emulator Software

Installing the Software	2
Software Licensing	3
Transportable Licenses	4

Installing the Software

NOTE

The E6951A PSAP Emulator software runs on:

- Windows 7 32-bit
 - Windows 7 64-bit
 - Windows 10 64-bit
-

Visit www.keysight.com/find/ecall to download the software.

You must be logged in to Windows with administrative privileges to install the software.

- 1 Unzip **E6951A.zip**.
- 2 Right-click **E6951A.exe** and select **Run as administrator** to launch the installer.
- 3 If the User Account Control dialog box appears, click **Yes** to allow the installation to continue.
- 4 Follow the instructions on the screen to complete the installation.
Note that you must accept the terms of the license agreement to continue.
- 5 Click **Finish** when the installation is completed and restart Windows.


Software Licensing

Obtain license

- 1 Obtain your software licenses using the instructions included with your Entitlement Certificate for the E6951A PSAP Emulator software.

Note that the license(s) will be unique to the PC (or E7515A UXM) that the software will be running on. You will need to provide the Host ID of the PC or E7515A UXM.

To find the host ID, right-click the Keysight License Manager on the taskbar and select **Open Keysight License Manager**.

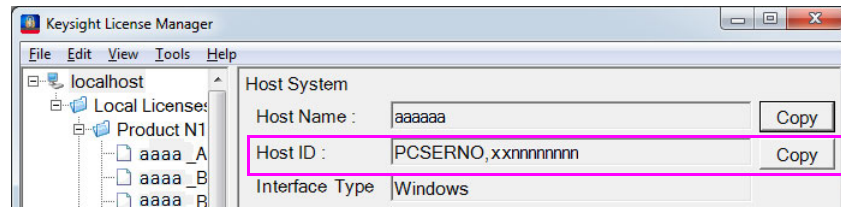

- 2 The generated license file(s) will be sent to you via email.

NOTE

Register or sign in with your profile at www.keysight.com/find/softwaremanager to obtain any software updates and/or new licenses using your entitlement details.

Install license on PC

- 1 In Keysight License Manager, select **File > Install**.
- 2 Locate the license file(s) and click **Open**.
The selected licenses will be installed.

Install license on E7515A UXM

If the software will be running on the E7515A UXM, copy the license file(s) to the root directory of a USB memory stick, then insert the USB memory stick into the E7515A UXM. Any licenses on the USB memory stick will automatically be installed on the E7515A UXM.

Transportable Licenses

Transportable licenses are identifiable by a **T** in their license number, for example, E6951A-1**TP**. This type of license allows you to move the license from one host PC or instrument to another, without the need to contact Keysight.

Select **Help > Keysight License Manager Help** and search for **transport** to find detailed instructions for the following tasks:

- To transport a license from one host PC to another.
- To save a transportable license to Keysight Software Manager for later assignment to a host PC.

